


# MAX IV

---

---

## Illustrated Parts Lists

---

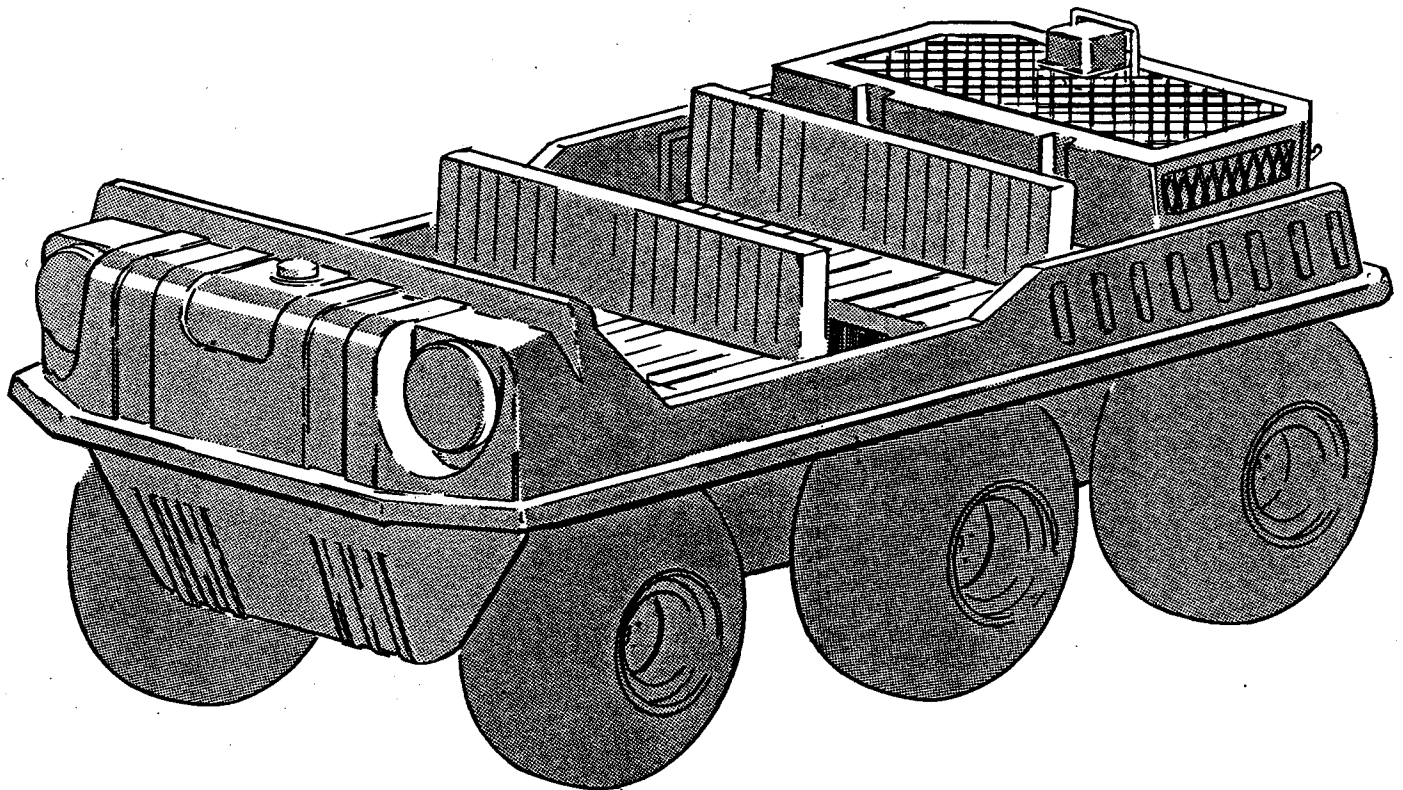


# MAX IV

## LIST OF ILLUSTRATIONS

Chassis Group . . . . .	2 - 3
Transmission & Steering . . . . .	4 - 5
Shift Group . . . . .	6 - 7
Motor & Electrical Group . . . . .	8 - 9
Body Group . . . . .	10 - 11
Passenger Compartment . . . . .	Back Cover

## Chassis Group

Item No.	Part No.	Description	Qty.
1	10022A	Bolt, 3/8NC x 1	A/R
2	015014	Bearing Flange w/o Grease Fitting	18
3	15012F	Bearing	12
4	60045	Locking Collar	12
5	10009A	Lockwasher, 3/8	A/R
6	10003A	Nut, 3/8NC	A/R
7	019503	Center Sprocket	2
8	10052A	Washer, 1/2	A/R
9	019009	Idler Sprocket	6
10	10141A	Nut, 1/2 NC	6
11	10126A	Lockwasher, 1/2	7
12	10071A	Locknut, 3/8 NC	A/R
13	019002	Rear Idler Plate, 2-3/4	2
14	019001	Rear Idler Plate	2
15	019501	Rear Idler Adjust Assembly	2
16	10136A	Nut, 1/2 NF	4
17	10031A	Bolt, 3/8NC x 2-1/2	2
18	10139A	Bolt, 1/2NC x 3	6
19	019502	Rear Sprocket	2
20	015502	Axle	6
21	015029	Bearing Flange with Grease Fitting	6
22	015022	Gasket, Axle	6
23	015501	Chassis	1
24	019504	Front Sprocket and Drum	2
25	10039A	Nut, 5/16NC Elastic Stop	2
26	018511	Foot Pedal Assembly	1
27	10002A	Nut, 5/16 NC	A/R
28	10008A	Lockwasher, 5/16	A/R
29	10014A	Washer, 5/16	A/R
30	10069A	Locknut, 1/4NC	2
31	018028	Brake Band Retainer	2
32	10134A	Bolt, 1/4NC x 1-1/2	2
33	10084A	Bolt, 5/16NC x 2-1/4	2
34	10124A	Bolt, 5/16NC x 2	2
35	15157A	Brake Band	2
36	10070A	Locknut, 5/16NC	2

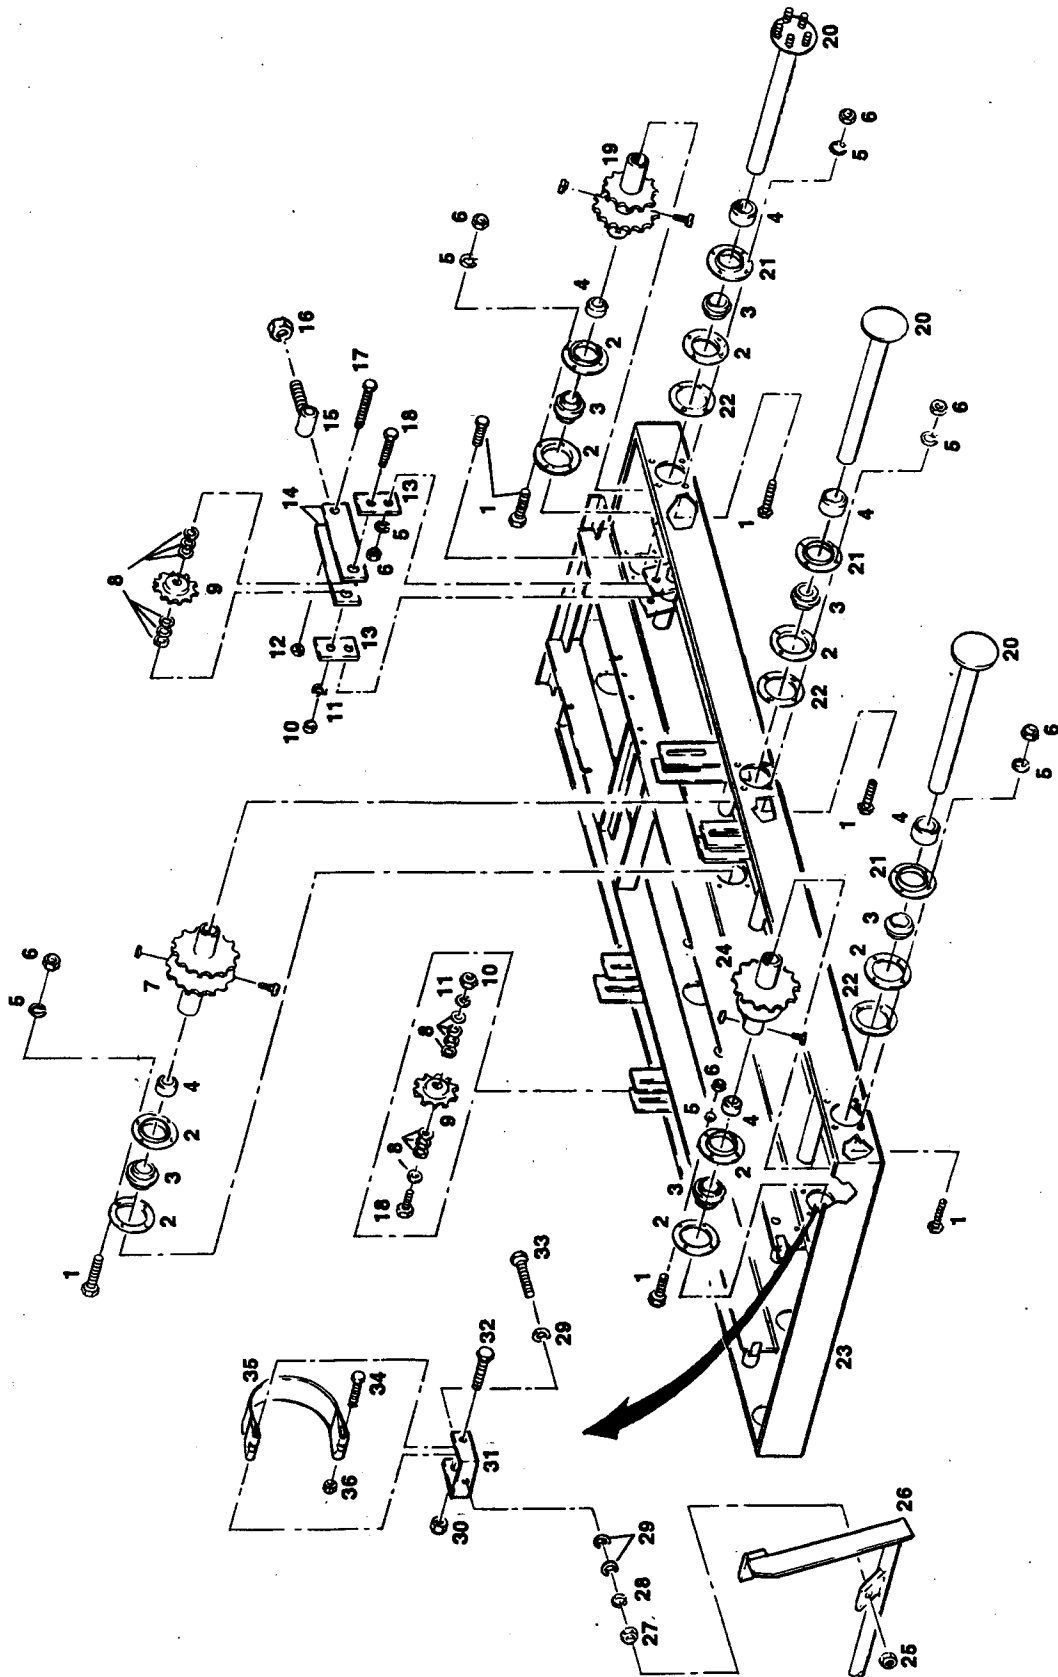


# MAX IV

---

## Transmission & Steering

Item No.	Part No.	Description	Qty.
1	21013A	Hand Grip	3
2	012007	Throttle Lever	1
3	014501	Steering Lever	2
4	011002	Battery Hold Down	1
5	10001A	Nut, 1/4 NC	A/R
6	10007A	Lockwasher, 1/4	2
7	011003	J Bolt	2
8	10174A	Nut, 7/16 NC	4
9	014503	Steering Rod	2
10	181639	Bolt, 3/8 NF x 1-1/4	4
11	13-13-056-002	Bolt Retainer	4
12	10070A	Locknut, 5/16 NC	2
13	10014A	Washer, Flat, 5/16	A/R
14	15065A	Cotter Pin, 1/8 x 1	A/R
15	13-13-098-003	Brake Lever	2
16	15036A	Eye Bolt, 5/16NC	2
17	014002	Spring Extension	2
18	15035A	Spring	2
19	13-13-056-003	Lever Clip	4
20	35002A	Transmission	1
21	T 20-201	R.H. Hold Down Bracket	1
22	T 20-200	L.H. Hold Down Bracket	1
23	10015A	Washer, 3/8	A/R
24	10009A	Lockwasher, 3/8	A/R
25	10021A	Bolt, 3/8 NC x 3/4	2
26	10052A	Washer, 1/2	1
27	10178A	Bolt, 3/8 NF x 3-3/4	1
28	15089A	Woodruff Key	1
29	018019	Washer, Flat 7/8 ID	2
30	018024	Pulley, Driven	1
31	018008	Transmission Support Plate	2
32	10022A	Bolt, 3/8NC x 1	A/R
33	10003A	Nut, 3/8NC	A/R
34	20041A	Ground Strap	1
35	10058A	Screw #10 x 1	1
36	018032	Spring	1
37	10180A	Washer, #10	1
38	10055A	Lockwasher, #10	1
39	10054A	Nut, #10	1
40	10002A	Nut, 5/16NC	A/R
41	10008A	Lockwasher, 5/16	A/R
42	018511	Foot Pedal Assembly	1
43	018030	Foot Pedal Retainer	2
44	10019A	Bolt, 5/16NC x 3/4	2
45	10013A	Washer, 1/4	A/R
46	15121A	Clevis Pin, 5/16 x 1-1/2	2
47	70178A	Threaded Rod End	2
48	014502	Steering Shaft	1
49	014001	Support Plate	1
50	10072A	Locknut, 3/8NF	4
51	018016	Belleville Washer	4

---

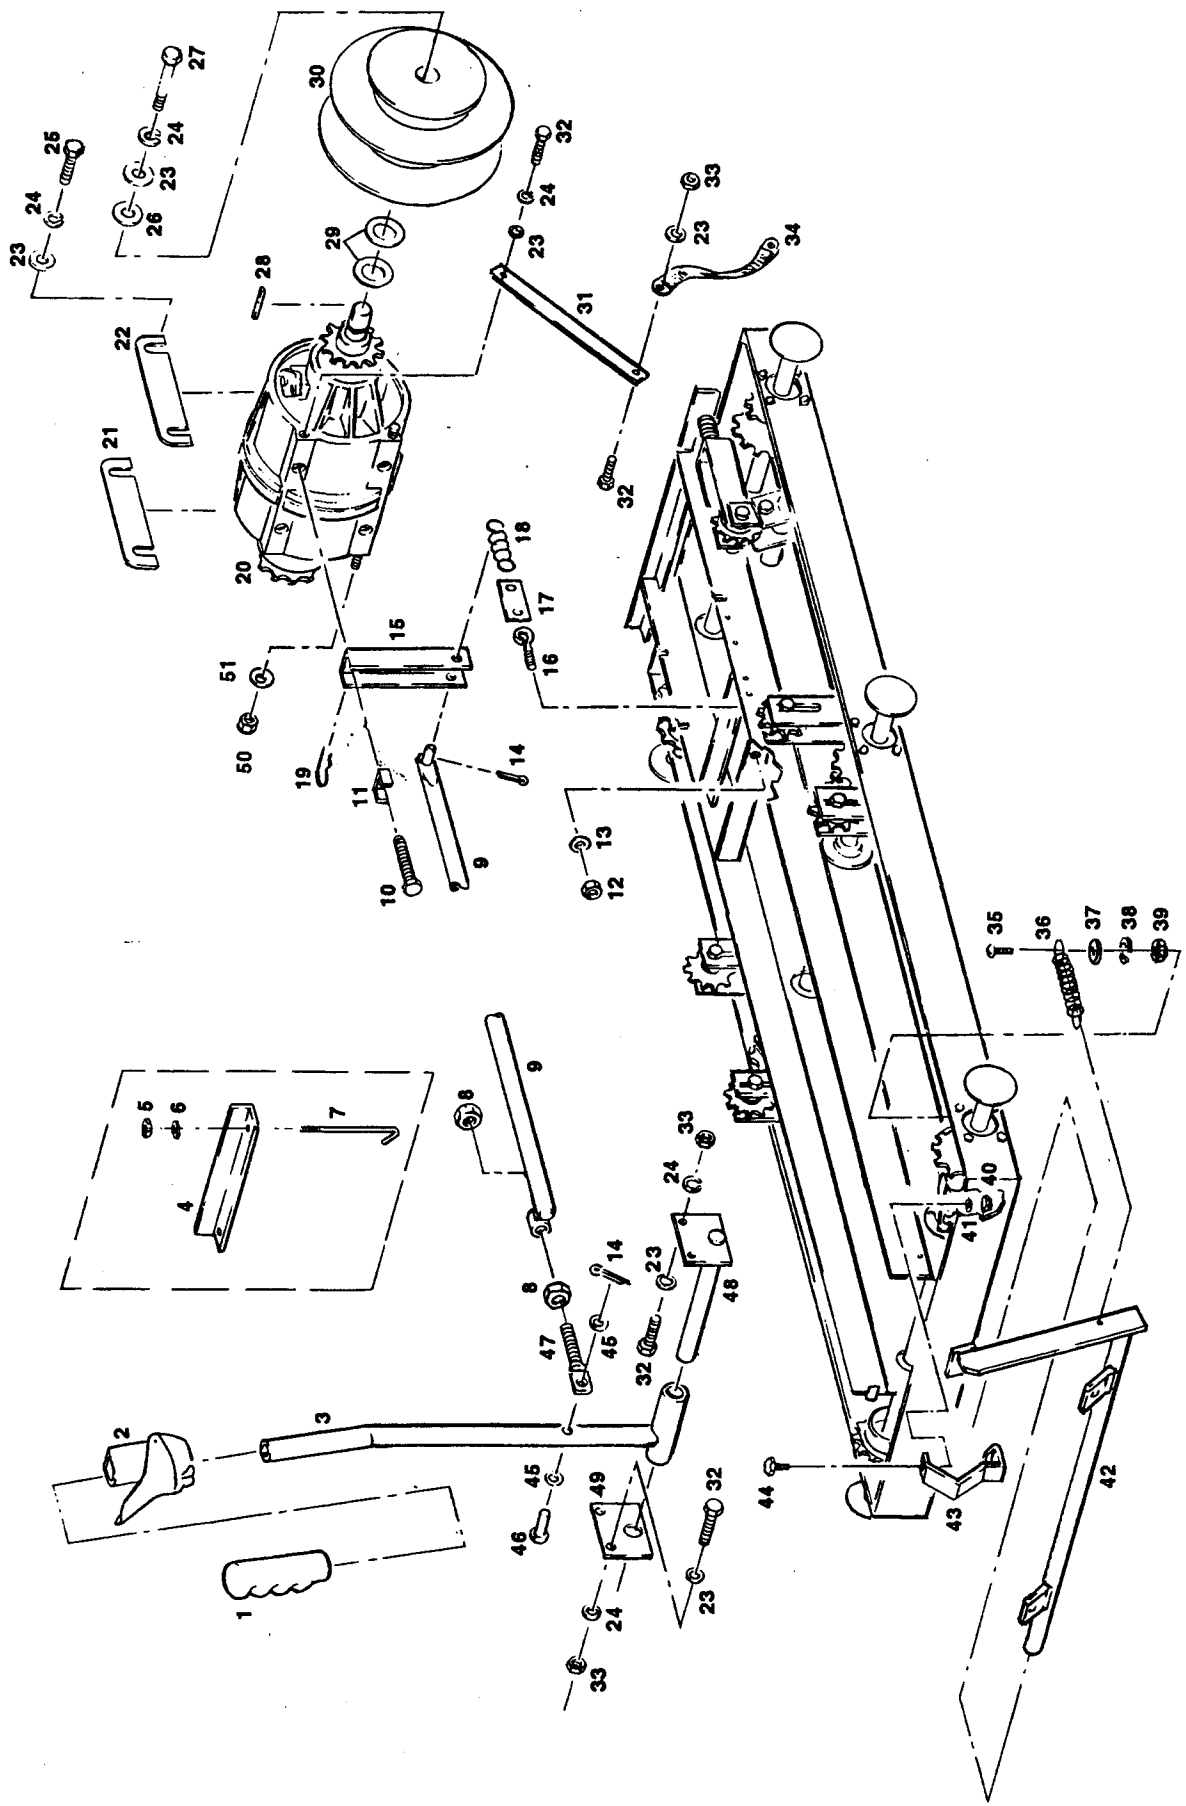


# MAX IV

---

## Shift Group

Item No.	Part No.	Description	Qty.
1	10147A	Cotter Pin, 1/8 x 1-1/2	6
2	21013A	Hand Grip	3
3	018502	Shift Lever Assembly	1
4	018010	Shift Rod Clevis	1
5	018025	Clevis Pin, 3/8 x 1-1/8	1
6	018503	Shift Rod Assembly	1
7	10022A	Bolt, 3/8NC x 1	A/R
8	10003A	Nut, 3/8NC	A/R
9	10009A	Lockwasher, 3/8	A/R
10	018501	Shift Shaft Assembly	1
11	018004	Grommet, 3/8 x 1-3/4	2
12	15065A	Cotter Pin, 1/8 x 1	A/R
13	10041A	Washer, 3/8 x 1-1/2 OD	4
14	018003	Shift Rod Adjustor	2
15	10013A	Washer, 1/4	A/R
16	018504	Shift Rod Connector	2
17	018017	Clevis Pin, 1/4 x 1-1/8	2
18	15034A	Cotter Pin, 3/32 x 3/4	2

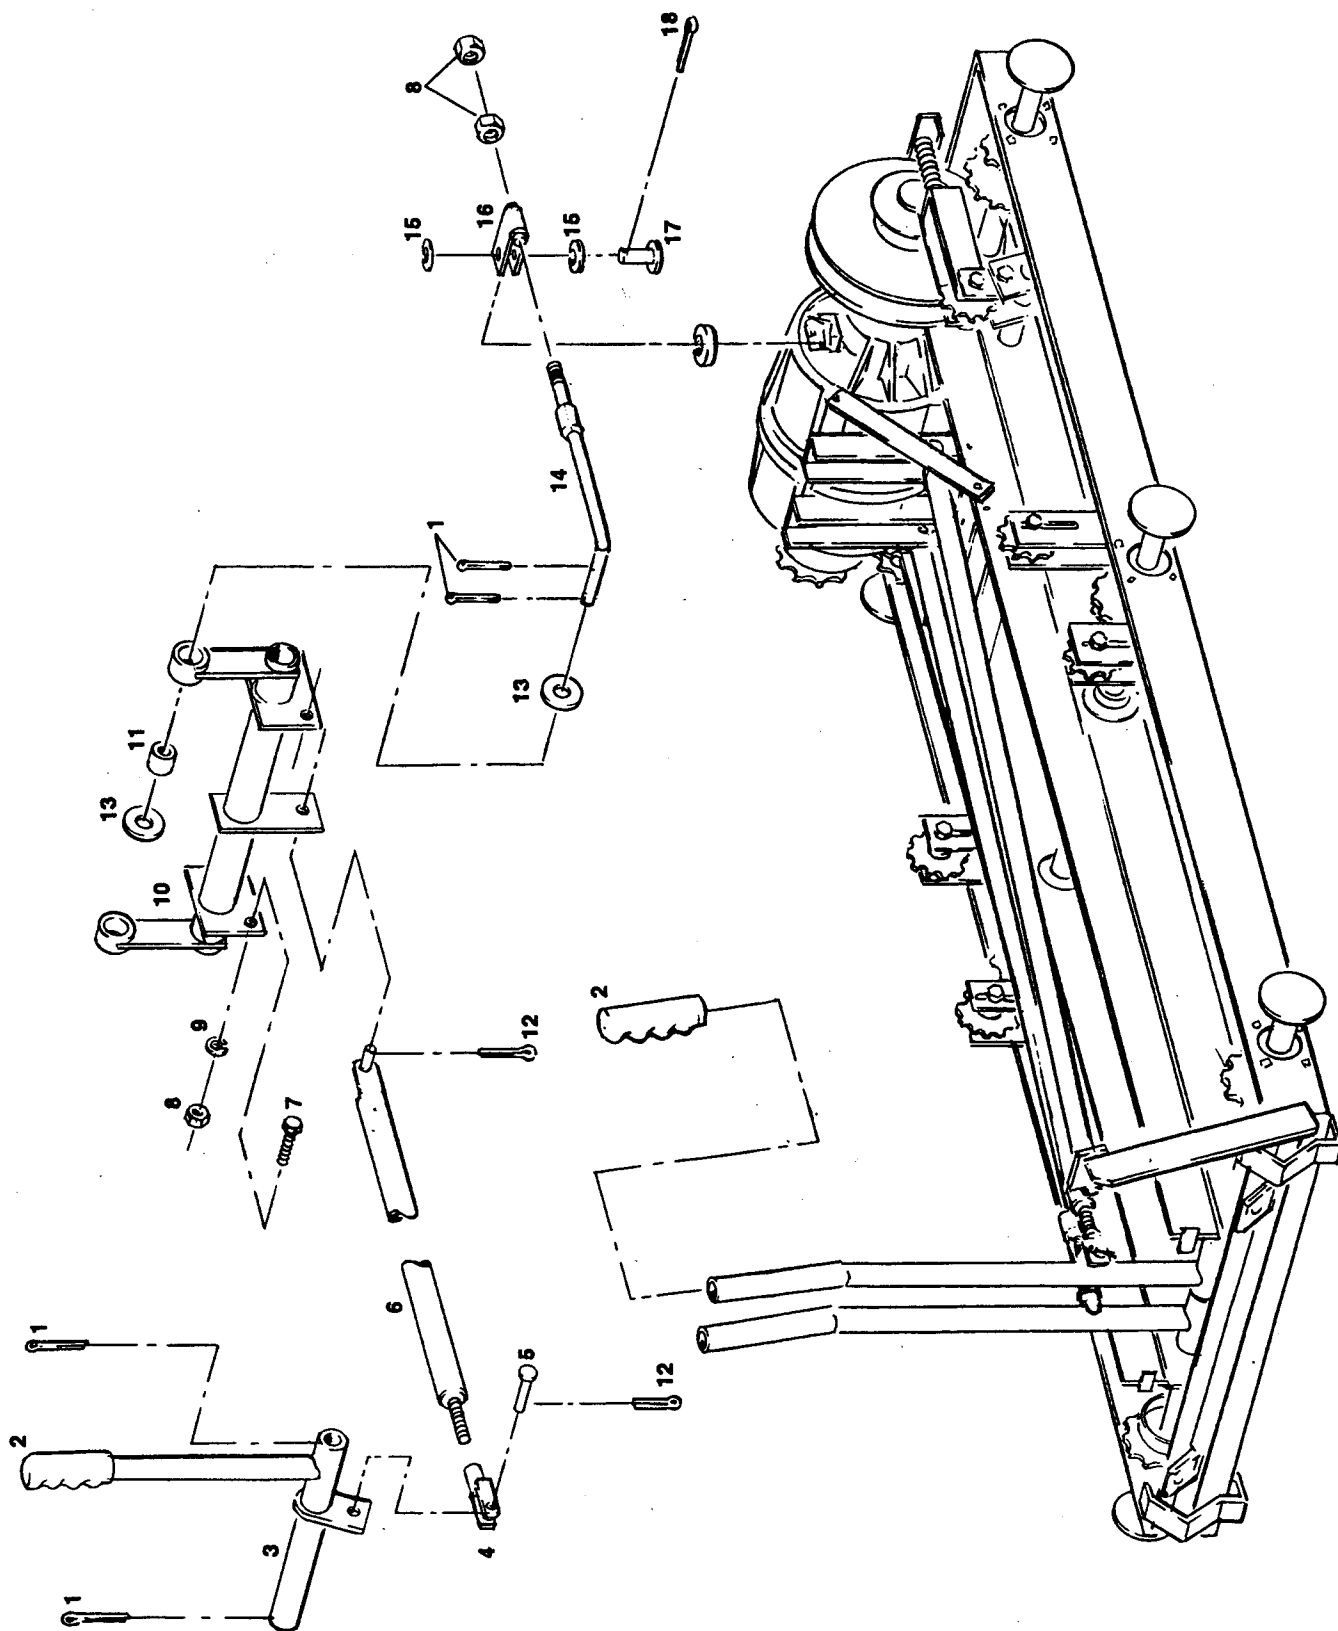

# MAX IV




---

## Motor & Electrical Group

Item No.	Part No.	Description	Qty.
1	15039A	Choke Cable	1
2	01019A	Fuel Line	1
3	21088A	Fuel Line Clamp	A/R
4	15071A	Fuel Filter	1
5	10002A	Nut, 5/16NC	A/R
6	10008A	Lockwasher, 5/16	A/R
7	011026	Battery Cable	2
8	20026A	Solenoid	1
9	10059A	Nut, 10/32 Elastic Stop	4
10	10157A	Screw, 10/32 x 3/4	4
11	20083A	Taillight Assembly	2
12	011505C	Wiring Harness, Taillight	1
13	15293A	Rivet, AD 612 BSLF	4
14	013014	Rubber Hold Down	4
15	10003A	Nut 3/8,NC	A/R
16	10009A	Lockwasher, 3/8	A/R
17	017003	Muffler Saddle	1
18	10015A	Washer, 3/8	A/R
19	70451	Spacer, Muffler Saddle	2
20	016022	Mounting Plate, 18HP Only	1
21	10184A	Bolt, 3/4NC x 2	2
22	10022A	Bolt, 3/8NC x 1	A/R
23	017511	Exhaust Pipe	1
24	017018	Muffler Clamp	1
25	017017	Muffler	1
26	10004A	Nut, 1/4NC	A/R
27	10007A	Lockwasher, 1/4	A/R
28	20026A	Solenoid	1
29	017004	Muffler Holding Spring	1
30	016015A	Tecumseh Engine, 16HP	1
	016015B	Tecumseh Engine, 18HP	1
31	34102	Exhaust Gasket	1
32	10019A	Bolt, 5/16NC x 3/4	2
33	10052A	Washer, 1/2	1
34	10158A	Bolt, 3/8NF x 2-3/4	1
35	016502	Engine Mount	1
36	10071A	Locknut, 3/8NC	4
37	10022A	Bolt, 3/8NC x 1	A/R
38	018023	Drive Belt, 16 & 18HP	1
39	10018A	Bolt, 1/4NC x 1	A/R
40	10017A	Bolt, 1/4NC x 3/4	1
41	10018A	Bolt, 1/4NC x 1	A/R
42	20000A	Battery	1
43	20041A	Ground Strap	1
44	10013A	Washer, 1/4	A/R
45	10007A	Lockwasher, 1/4	A/R
46	10036A	Wingnut, 1/4NC	2
47	016009	Rubber Engine Mount	4

---




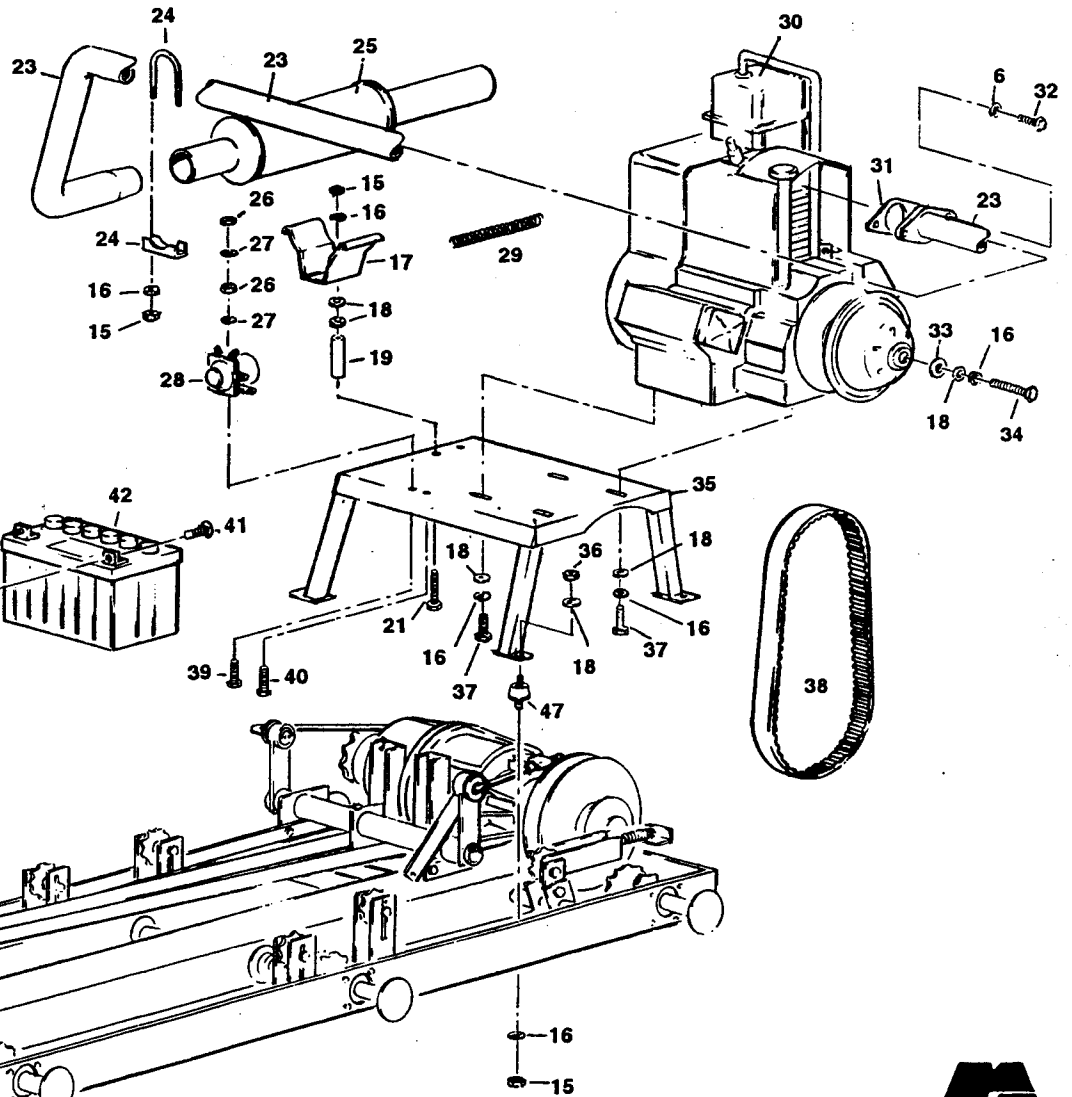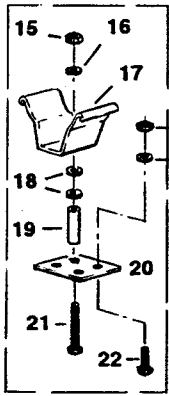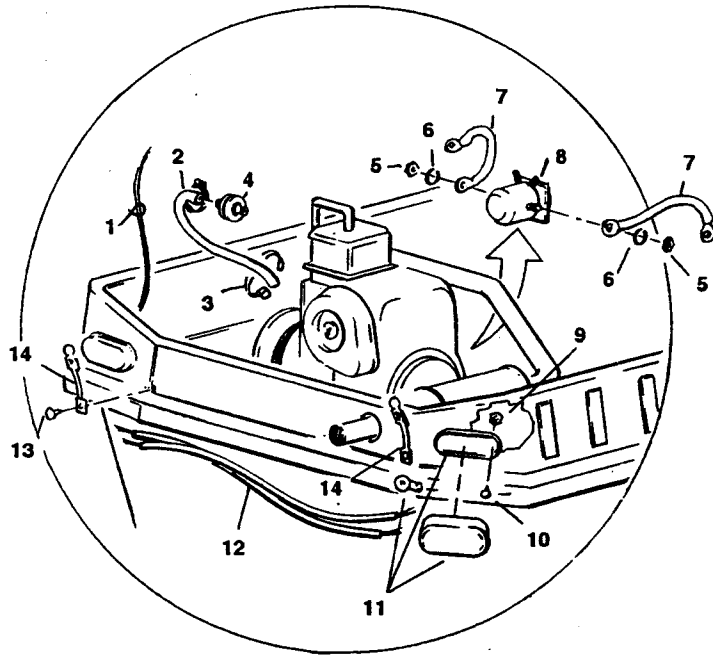

# MAX IV

## Body Group

Item No.	Part No.	Description	Qty.
1	20093A	Ammeter	1
2	013009	Serial Plate	1
3	10076A	Washer, #8	4
4	15086A	Rivet, AD 66 ABS	A/R
5	011004	Ignition Switch	1
6	15039A	Choke Cable	1
7	01019A	Fuel Line	1
8	012002	Front Fuel Tank Strap	2
9	15086A	Rivet, AD 66 ABS	A/R
10	012003	Rear Fuel Tank Strap	2
11	012001	Fuel Tank	1
12	013002	Upper Body	1
13	15058A	Fuel Cap	1
14	15293A	Rivet, AD 612 BSLF	A/R
15	013014	Rubber Hold Down	4
16	15095A	Ty Wrap Base	A/R
17	15104A	Ty Wrap	A/R
18	15039A	Choke Cable	1
19	10172A	Carriage Bolt, 1/4NC x 1-1/4	A/R
20	10003A	Nut, 3/8NC	A/R
21	10009A	Lockwasher, 3/8	A/R
22	10022A	Bolt, 3/8 NC x 1	A/R
23	015020	Inner Trailer Hitch	1
24	01014A	Trailer Hitch Gasket	1
25	015021	Outer Trailer Hitch	1
26	10141A	Nut, 1/2NC	A/R
27	10126A	Lockwasher, 1/2	A/R
28	10140A	Carriage Bolt, 1/2 NC x 1-1/4	1
29	013001	Lower Body	1
30	013020	Rear Skid Plate	1
31	15291A	Rivet, AD 68 H	A/R
32	10007A	Lockwasher, 1/4	A/R
33	10001A	Nut, 1/4 NC	A/R
34	015029	Bearing Flange with Grease Fitting	6
35	015503	LH Goodyear Rawhide Tire	3
	015504	RH Goodyear Rawhide Tire	3
36	013021	Front Skid Plate	1
37	10076A	Washer #8	A/R
38	013022	Body Seal	1
39	10059A	Nut, 10/32 Elastic Stop	4
40	011006	Headlight	2
41	011009	Headlight Retaining Clips	6
42	011007	Headlight Mounting Ring	2
43	10137A	Screw, 10 x 1	4
44	15193A	Fuel Tank Drain Plug	1
45	012001	Fuel Tank	1
46	011010	Headlight Harness	1
47	10013A	Washer, 1/4	2
48	10018A	Bolt, 1/4 NC x 1	A/R
49	013018	Trim Strip	1
50	21088A	Fuel Line Clamp	A/R
51	015017	Lug Nut, 7/16NF	30

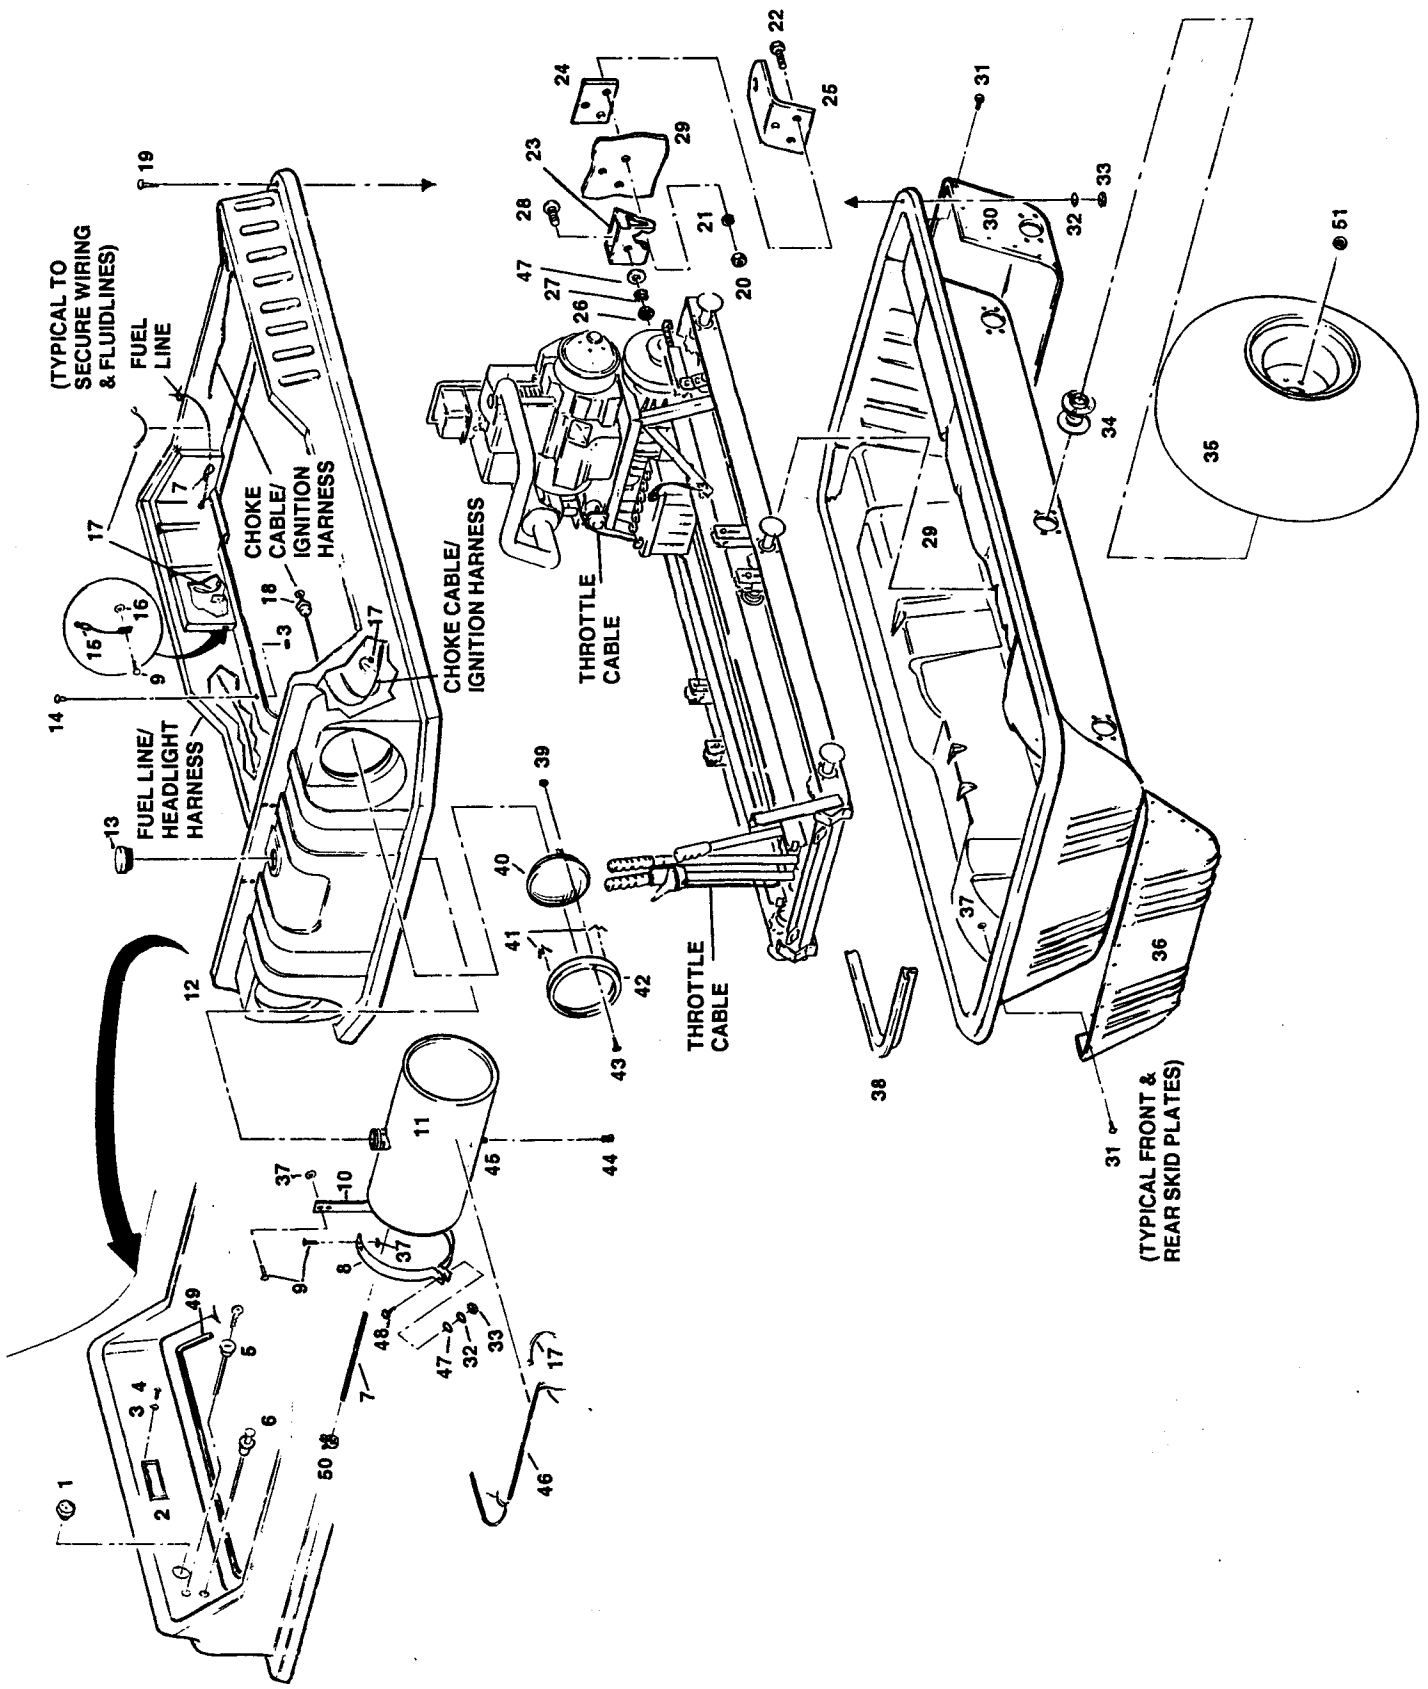

# MAX IV

## Passenger Compartment

Item No.	Part No.	Description	Qty.
1	013005	Rear Footwell	1
2	013010	Seat Back	2
3	013011	Seat Bottom	2
4	013501	Rear Seat Frame	A/R
	013503	Rear Seat Frame 26" Tires	A/R
5	10137A	Screw, 10 x 1	A/R
6	10007A	Lockwasher, 1/4	A/R
7	10018A	Bolt, 1/4 NC x 1	A/R
8	10154A	Screw, 1/4NC x 1-1/2	8
9	013012	Top Vent	1
10	013008	Rear Vent	1
11	013006	Side Vent	2
12	013013	Hold Down Hook	4
13	013019	Engine Cover Stiffening Plate	1
14	15086A	Rivet, AD 66 ABS	A/R
15	10076A	Washer, #8	A/R
16	10002A	Nut, 5/16 NC	A/R
17	10008A	Lockwasher, 5/16	A/R
18	10020A	Bolt, 5/16 NC x 1	A/R
19	013502	Front Seat Frame	1
20	013004	Front Floorboard	1
21	10180A	Washer, #10	A/R

